




77850 + 77015


REGENT Basin + REGENT Pedestal
REGENT Lavabo + REGENT Säule
REGENT Lavabo + REGENT Colonne

• NOVA •
CLASSIC

Version 26.01.23

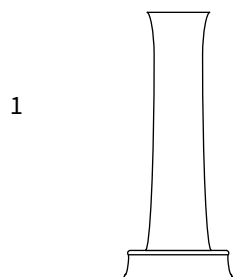


1 Set the pedestal on the floor

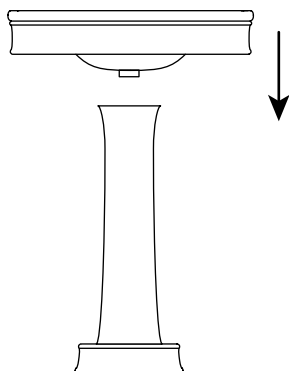

2 Set the basin on to the pedestal

3 Fasten the basin to the wall

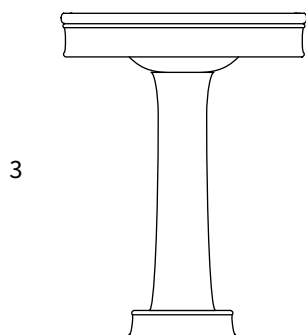

1 Säule auf Boden stellen

2 Lavabo daraufsetzen

3 Lavabo an Wand befestigen

1 Posez la colonne au sol

2 Posez le lavabo au-dessus

3 Fixation du lavabo au mur

IMPORTANT:
Always use putty that stays soft!

WICHTIG:
Unbedingt weichbleibenden
Kitt verwenden!

IMPORTANT:
Utiliser un mastic qui reste élastique!

